Evolution Measurement Ltd Product User Guide





CANbus to USB Converter

(P# ELE-CANDI-CANDI01)

Revision History:	
Issue: 1 Revision: 0	First issued – August 2020
Issue: 1 Revision: 1	Updated Logging Information / GUI Info



Conter	nt:
Sectio	n: Page:
1 Intro	duction3
1.1	Scope & Definitions
1.2	Description
_	
2	Technical Data
2.1	Specification
2.2	Dimensions
3	Installation & Use6
3.1	Unpack and Inspect
3.2	Drivers and GUI Installation
3.3	Electrical Connection
4	Operation8
5	Maintenance
5.1	General Information
5.2	Safety Information
5.3	Fault finding
5.4	Repair and Recalibration
6	Storage and Disposal
6.1	Storage
6.2	Disposal
7	GUI - Graphical User Interface Use10



1. Introduction

1.1 Scope & Definitions

This manual provides installation, operation and maintenance instructions for the EvoScann® CANDI CANbus to USB Converter

1.2 Description

EvoScann® CANDI is designed for use with our range of P-Series Pressure Scanners and allows for integration of a single scanner with a personal computer running our Graphical User Interface (GUI). The CANDI is powered over a USB port on your personal computer and operation is enabled by installation of the required drivers and software provided on the USB Drive.

The CANDI and GUI allow for set-up and configuration of an individual EvoScann® P-Series Pressure Scanner, where access to a CANbus enabled system is not possible, and provides for simple scanning and logging, or to allow troubleshooting and fault identification.

Electrical connection can be made to the EvoScann® P-Series Pressure Scanner either via the green 4-way terminal block or fixed ASX Circular Connector. Note, only one scanner should be attached at a time, using only one connection method.






2. EvoScann® CANDI CANbus to USB Converter Technical data

2.1 Specification

Standard Supply:	Peli 1040 Micro Case EvoScann® CANDI Converter 1 m USB Lead ASX Mating Connector USB Drive with Files
P-Series Inputs:	CANDI - ASX Connector – ASX002-055B-HE-R (Socket) P-Series – ASX Connector – ASX602-05PB-HE-R (Plug) CANDI – Screw Terminal – MKDS ¼-3,5
USB Connection:	CANDI – Micro USB Type B Female, USB 2.0 PC – USB A Female (Supplied Lead Male USB A to Male USB Micro B – 1 m)
Power Requirement:	USB 5 V ± 5% Note: CANDI has an internal 12V DC Voltage Converter
Construction materials:	Aluminium / Plastic / Stainless Steel
Operating Temperature:	+10°C to +60°C
Communication:	CANbus over USB
Operating System:	Windows [®] 10, 8.1 (32/64-bit)
Driver Requirement:	PEAK-System Installation Package (Supplied) National Instruments™ Runtime Engine (Supplied)
Software:	Evolution Measurement Node Tool (P-Series Specific)
Dimensions: Outer case:	85 x 75 x 20 mm



2.2 Product Outline Dimensions EvoScann® CANDI CANbus to USB Converter

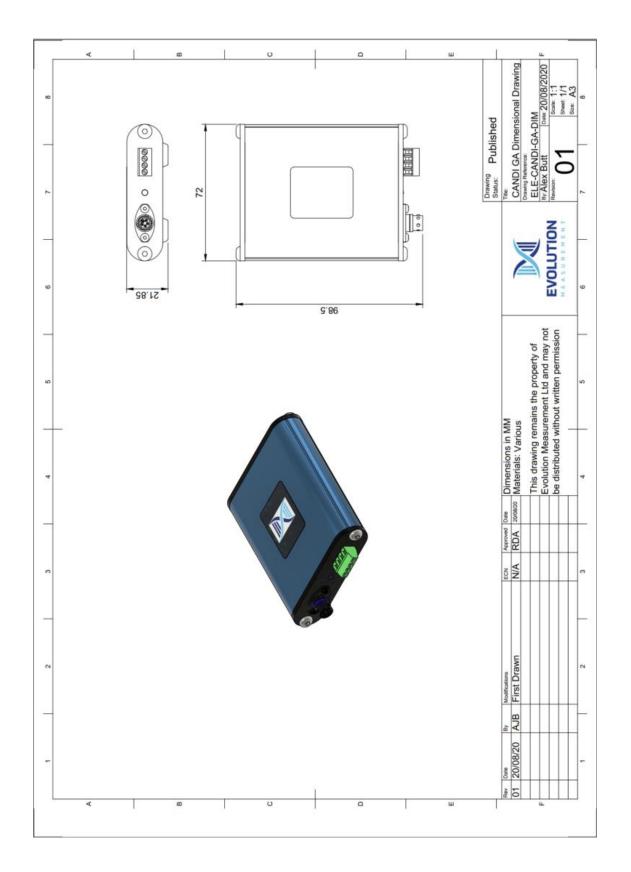



3. Installation & Use

EvoScann® CANDI is ideal for use as a desktop tool, or as part of a remote measurement package. Consideration of mounting position and use will ensure optimal performance and instrument longevity. The EvoScann® CANDI is designed to be robust but should be handled and installed with all reasonable and usual precautions necessary for a measurement instrument.

3.1 Unpack and Inspect

Remove all packaging materials from the unit and check for any damage.

If the unit has been damaged, notify the supplier and carrier in writing within three days of delivery, stating the item number, serial number and order number.

Retain all package materials for further inspection. Do not use the unit if it has been damaged.

3.2 Drivers and GUI Installation

Refer to the supplied USB Drive for files and Readme.txt regarding installation of the Drivers and GUI version <u>before</u> any connection to the EvoScann® P-Series Pressure Scanner is attempted.

🗐 READ ME Install.txt - Notepad	_		\times
File Edit Format View Help			
EvoScann P-Series CANDI Software / Driver Install Win 10, 8.1			^
1 - CAN DRIVER SET UP CAN Driver SETUP - PEAK > Set Up.Zip > PeakOemDrv.exe Run .exe installation. Re-boot PC.			
2 - P-Series Customer GUI Install - PxA (P08 / P16 / P64) PxA Customer GUI > Volume > SetUp.exe Re-boot PC			
			>
			>
Ln 1, Col 1 100% Window	vs (CRLF) U	ITF-8	.:




3.3 Electrical Connection


Electrical Cable Identification

Cable Identification				
YELLOW	CANH			
GREEN	CANL			
RED	SUPPLY (VSUP)			
BLACK	GND			

	Title	POWER	POWER AND CAN ASX					
	Label	NONE	NONE					
	Connector	ASX0-02	05-SB-H	E				
	Accessory	NONE						
	Boot	NONE						
Pin	Function	Gauge	Shield	TP	Dest 1	Dest 2	Dest 3	Notes
1	VSUP	28						
2	GND	28						
3	CANH	28						
4	CANL	28						
5	N/C							

	Title	POWER	POWER AND CAN SCREW TERMINAL					
	Label	NONE	NONE					
	Connector	PHOENIX	(MKDS 1	/4-3,5				
	Accessory	FARNELI	_ 247-858	38				
	Boot	NONE						
Pin	Function	Gauge	Shield	TP	Dest 1	Dest 2	Dest 3	Notes
1	VSUP	28						
2	GND	28						
3	CANH	28						
4	CANL	28						

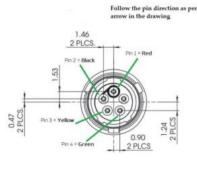

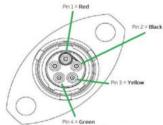

(Note: Check direction indication marked on the one fitted to your CANDI)



4. Operation

Operation of the EvoScann® CANDI is simple and straightforward. With the GUI running and the P-Series electrically connected the scanner will immediately start to scan.

Below is a screenshot of a typical display from the EvoScann® GUI, with EvoScann®

(P-Series P8-A for information). Refer to Section 7 for use.

P8A Config	guration Tool.vi					_	
		P8A Co	onfiguration To	ol			ISSUE 1.0
Sensors	Logging						
1010.4 1010.3 1010.2 1010.1 1010.1 1010.1 1009.9 1009.9 1009.6 1009.5 1009.5 1009.4 Pressure 1009.94					E C# Lengt	ge 600-12	7 0 ×180 ×0 YTE V
	[NEW	CONFIGURA	ION]			l	SENSOR #
NEW	N PERIOD	RANGE	600-1100mB	ar 🚽	Ð		1254 D
NEW SEN	NSOR NO. 1100 [n]	MUX	MUX ENABLE (1 ID) 🚽		·	5 D
	NEW ID 10180 [n]	BAUD	1MBit/s	1254 😽		(0
BAI	ROMETRIC 1010.00 [mB]	nBYTE	7 ID 80181	AUTO	~]	`	0
!!!!ALLOW	V 2 SECONDS BETWEEN SETTINGS!!!!	PCAN SET * BAUD Settir * nByte=7 fir	1MBit/s ng requires firmware mware >=13	>=10		(0 0 0
			CLOSE				



5. Maintenance

5.1 General Information

EvoScann® CANDI is designed to require no user intervention other than checking electrical connections are sound for the connected equipment

5.2 Safety Information

Observe all appropriate safety precautions when operating any electrical equipment. Always ensure wiring is done by competent persons in strict accordance with the electrical connection details in this document.

Do not use abrasive or solvent substances to clean the unit.

Do not attempt to open the EvoScann® CANDI. The unit is factory sealed and opening the unit will result in removal of any and all warranty.

5.3 Fault finding

Symptom:	Check likely cause:
Scanner not functioning	Ensure Drivers are fully installed and operational. Ensure correct wiring connections are made. Ensure USB is connected to a functional Port
Scanner reading incorrect pressures	Check correct range is selected
Scanner reading intermittently	Check correct version of GUI is being used for P- Series connected

5.4 Repair & Recalibration

Field repair is not possible with EvoScann® CANDI. All repairs must be carried out by Evolution Measurement Ltd.

To ensure optimum service and performance, return to Evolution Measurement Ltd.

See contact us page.



6. Storage and Disposal

6.1 Storage

EvoScann® CANDI should be placed in its supplied case when not in use and store in a clean, dry, dust and moisture-free area, avoiding temperature extremes. Avoid the risk of droppage, vibration or other unnecessary impact.

6.2 Disposal

At end of life, dispose of EvoScann® CANDI in full accordance with all local procedures and practices, or return the unit to Evolution Measurement Ltd for disposal. Do not incinerate as the product may emit noxious fumes.





7. GUI – Graphical User Interface Use

Sensors Tab

P8A Configuration Tool.vi		– 🗆 X
EVOLUTION MEASUREMENT	P8A Configuration Tool	ISSUE 1.0
Sensors Logging		
1- 0.8- 0.6- 0.4- E 0.4- E 0.2-	History 2 3 4 5 5 6 6 6 1 1 1 1 1 1 1 1 1 1 1 1 1	Sensor No. 950 Firmware 182 Period 182 CAN ID <mark>x 3B6</mark> CAN ID SR <mark>x 3B6</mark>
9 0- 9 -0.2- 9 -0.4- -0.6- -0.8- -1- -1- Tim Pressure	□ 7 □ 8 □ 8 □ 10 □ 10	Length 7 BYTE Range 600-1200mBar 150- 100- 50- 0-
0.00 0.00 0.00 0.00	0.00 0.00 0.00 0.00	-40-🍐
[NEW	CONFIGURATION]	CAN ID SENSOR #
NEW PERIOD 0010 [mS] NEW SENSOR NO. 01100 [n] NEW ID 0180 [n] BAROMETRIC 1010.00 [mB] !!!!ALLOW 2 SECONDS BETWEEN SETTINGS!!!!	RANGE 600-1100mBar MUX MUX ENABLE (1 ID) BAUD 1MBit/s 1158 nBYTE 7 ID 0181 AUTO PCAN SET 1MBit/s * BAUD Setting requires firmware >=10 * nByte=7 firmware >=13	1158 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
	CLOSE	

Main Screen - Shows display of channels selected from channel list available 1....>.

Sensor No. – Serial Number

- Firmware P-Series Firmware Revision
- Period Set Period of P-Series
- CAN ID Set CAN ID of P-Series (Hex)
- CAN ID SR Set CAN ID of the Slow Row data when in 7-Byte mode. [Auto] sets CAN ID +1 (Hex)

Temperature display - shows sensor temperature for internal compensations.

Length – 8 Byte / 7 Byte (8 Byte Default)

Range – Selected Range

Pressures – Shows live channel pressures in selected pressure range mode

©Evolution Measurement Ltd 2021. All rights reserved P a g e | 11 Doc.No: M-90223 Iss.1 Rev 1



New Configuration

Changing data and pressing the green download button saves the entry into the connected P-Series. Care should be taken as there is no 'restore to factory' function.

[NEW		CAN ID	SENSOR #		
NEW PERIOD 00010 [ms]	RANGE	600-1100mBar	A		1158
NEW SENSOR NO. 1100 [n]	MUX	MUX ENABLE (1 ID)	A		0
NEW ID <mark>80180</mark> [n] 🕢	BAUD	1MBit/s 1158 🗸	₽		0
BAROMETRIC 1010.00 [mB] 🐼	nBYTE	7 JD x <mark>0181</mark> ⊻ AUTO	₽		0
	PCAN SET	1MBit/s			0
<pre>###ALLOW 2 SECONDS BETWEEN SETTINGS!!!! * BAUD Setting requires firmware >=10 * nByte=7 firmware >=13</pre>					0 0

Note: Screen shows generic data <u>not</u> 'As Set' data

New Period – Limits 0002 (2 m/s) to 00100 (100 m/s)

New Sensor No. - Changes Serial Number (Not Recommended)

New ID – Changes Can ID

Barometric – Allows user to enter barometric pressure read from a transfer standard, or similar, to enable correction of output (Absolute Units Only).

Range – Allows user to change from selectable ranges depending on GUI version.

Mux – Allows the user to change from Multiplexer Enabled (1 ID) or Multiplexer Off (3 ID). Refer to your EvoScann® P-Series Manual for further details

BAUD – Allows rate to be set – Sensor ID Number (>=Ver 10 Firmware Required)

nBYTE – 8 Byte / 7 Byte (8 Byte Default)

ID – User configurable (Hexadecimal)

PCAN – Period Setting Options

Logging Tab

P8A Configuration Tool.vi	- 🗆 ×
FOR Configuration Tool	ISSUE 1.0
Sensors Logging	
Directory	
C:\Users\neil.cardinal\Desktop\P8-A Test	
Files to Create	Sensors to Log
8	CAN ID SENSOR #
	<u>1158</u>
8	
8	0
	0
8	0
9	
8	0
2	- RECORD
<u></u>	Files Opened?
8	
8	

B

Press the file icon, the route path can now be set for the log file.

SENSOR

Click Sensor Number to create individual log file...

P8A Configuration Tool.vi	- 🗆 ×
EVOLUTION MEASUREMENT P8A Configuration Tool	ISSUE 1.0
Sensors Logging	
Directory	_
C:\Users\neil.cardinal\Desktop\P8-A Test	
Files to Create	Sensors to Log
gC:\Users\neil.cardina\P8-A Test\P8A 1158 29_03_2021 11_17.csv	CAN ID SENSOR #
	0
	0
	0
	0
8	0
	0 0
8	RECORD
8	Files Opened?
8	1
3	1
<u></u>	
CLOSE	

Record – Starts the current log file / **Logging** - Stops the current log file.

©Evolution Measurement Ltd 2021. All rights reserved P a g e | **13**





Contact us:

Evolution Measurement Ltd

7 Regents Court, South Way, Walworth Business Park, Andover, Hampshire SP10 5NX, UK Telephone: +44 (0) 1264 316470 Email: enquiries@evolutionmeasurement.com <u>www.evolutionmeasurement.com</u>



©Evolution Measurement Ltd 2021. All rights reserved P a g e |**14** Doc.No: M-90223 Iss.1 Rev 1